



## Section C

### Intercell Connectors and Endrow Connectors

Part #	Description	Picture
509-3015	2 1/8" Inter-cell Connector-SL (5 PLT)	
509-1015	2 1/8" Inter-cell Connector-LG (5 PLT)	
509-3016	2 3/4" Inter-cell Connector-SL (7 PLT)	
509-1016	2 3/4" Inter-cell Connector-LG (7 PLT)	
509-3005	3" Inter-cell Connector-SL (ALL)	
509-1005	3" Inter-cell Connector-LG (ALL)	
509-1006	3" Smart Battery Intercell	
509-3010	3 1/4" Inter-cell Connector-SL (ALL)	
509-1010	3 1/4" Inter-cell Connector-LG (ALL)	
509-1018	3 5/8" Smart Battery Intercell	
509-3045	3 7/8" Inter-cell Connector-SL (160 AMP)	
509-1045	3 7/8" Inter-cell Connector-LG (160 AMP)	



## Section C








### Inter-cell Connectors and Endrow Connectors

Part #	Description	Picture
509-3030	4 3/8" Inter-cell Connector-SL (11 PLT)	
509-1030	4 3/8" Inter-cell Connector- LG (11 PLT)	
509-3021	5" Inter-cell Connector- SL (13 PLT)	
509-1021	5" Inter-cell Connector- LG (13 PLT)	
509-3025	6" Inter-cell Connector- SL (15 PLT)	
509-1025	6" Inter-cell Connector- LG (15 PLT)	
509-3041	17 Plate Endrow 4H-SL	
509-1041	17 Plate Endrow 4H-LG	
509-3042	19 Plate Endrow 4H-SL	
509-1042	19 Plate Endrow 4H-LG	
509-3043	21 Plate Endrow 4H-SL	
509-1043	21 Plate Endrow 4H-LG	



## Section C

### Intercell Connectors and Endrow Connectors

Part #	Description	Picture
509-3044	23 Plate Endrow 4H-SL	
509-1044	23 Plate Endrow 4H-LG	
509-3050	25 Plate Endrow 4H-SL	
509-1050	25 Plate Endrow 4H-LG	
509-3052	27 Plate Endrow MH-SL	
509-1052	27 Plate Endrow MH-LG	
509-3215	3 3/4" Triple Hole Endrow- SL (29-33 PLT) Requires 2 Endrows	
509-1215	3 3/4" Triple Hole Endrow- LG (29-33 PLT) Requires 2 Endrows	
509-3200	3" Terminal Connector-SL	
509-1200	3" Terminal Connector-LG	
509-3205	3 3/4" Terminal Connector- SL	
509-1205	3 3/4" Terminal Connector- LG	
509-3210	3 3/4" Tri Post Terminal Connector- SL	
509-1210	3 3/4" Tri Post Terminal Connector- LG	