

## Joining Battery with BMU to Network Instructions

These instructions assume that the BMU has been installed on the battery and is properly set. It also assumes that a network has been started and set up on the charger.

- 1 Confirm that the Charger has been set to BMU or Dual "Source". Press ESC to get to main menu.
- 2 Using up/down arrows, scroll to "Login" and press OK.
- 3 Press OK, and using up/down and left/right arrows enter 2451, then press OK.
- 4 Using up/down arrows, scroll to "Service" and press OK.
- 5 Scroll to "Charging Param" and press OK>
- 6 "Source should be set to either BMU or Dual. If not scroll to "Source", press OK and use up/down arrows to select BMU or Dual, then press OK.
- 7 Once the charger is preset to BMU or Dual source, press ESC to return to the Service menu, and scroll to the "Display" menu and press OK.
- 8 Scroll to "Backlight" and press OK.
- 9 Set Backlight to 60 using up/down arrows and press OK. Press escape to return to the Service Menu .
- 10 Scroll to "Join Enable", and press OK.
- 11 Within the next minute, connect the battery with the BMU installed to the charger. The charger should start, then stop briefly before restarting.
- 12 Press ESC until the charger displays the charging display. Verify that the display readout includes the BMU ID number.
- 13 Done